


Note:

The washer fluid reservoir supplies washer fluid to both the windshield washers and headlight washer system. Removing and installing ⇒ [Page 92-9](#) .

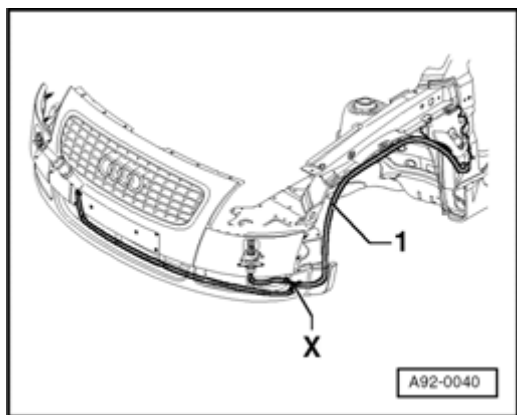

A


- The two headlight washer spray jets are supplied from the washer fluid reservoir via hose -1-.

Removing

- Remove bumper

⇒ [Repair Manual , Body Exterior, Repair Group 63](#)

- Disconnect washer fluid supply connection -X- at left spray jet (connection -X- is for both jets).

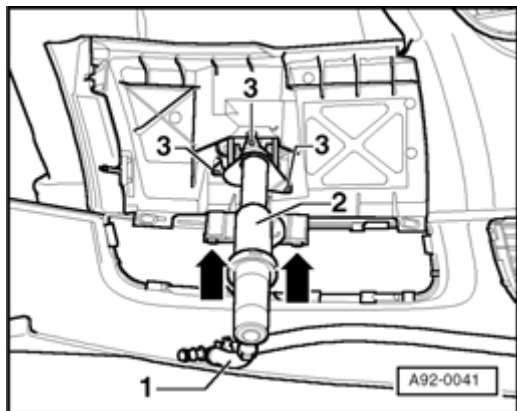

A

- Disconnect hose -1- from spray jet -2-.
- To remove spray jet, first remove bolts -3- from spray jet, then bolts -arrows- on jet retainer.

Installing

- Install in reverse order of removal.